


# **UFO S-23 INFRARED HEATER**

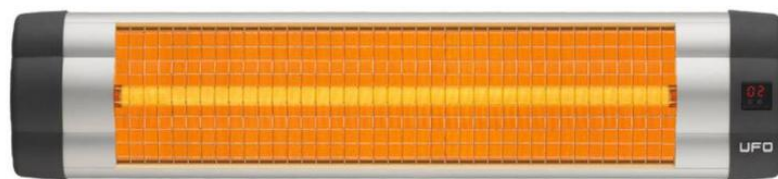

**Turnbull & Scott™**  
Trusted.

## PRODUCT DESCRIPTION

The Infrared heater with remote control is ideal for indoor heating and provides quick, efficient and comfortable heat.

Like heat from the sun, infrared heat only warms the objects around it, providing a highly effective heating solution with minimal energy waste. Heat is felt instantly and the complete warm up time is 25 seconds.

The sleek, compact design makes it perfect for use in commercial spaces and large indoor spaces. With a stylish black and silver aluminium body, it is suitable for both wall and ceiling mounting or floor mounted with an additional stand.

Easy to install and with no maintenance costs, the unique infrared light produced is 17 times better than its competitors and provides safe, medium-wave infrared heat. It has a bulb lifespan of over 9000 hours.

It gives a heat output of 2.3kW and has the capacity to heat an area of 23m<sup>2</sup> indoors. The IP3X rating means that it is safe for use where there is no water.

The remote control with LCD screen allows you to control the heater's five heat settings as well as power and timer settings. It also has an option for a programmable sleep mode.

Also included are a UK compatible plug, heat resistant black PVC cable and all necessary installation parts.



## KEY FEATURES

- Up to 2.3kW heat output
- Single phase 230v supply
- Remote switch with five comfort heat levels
- Suitable for wall or ceiling horizontal mounting
- 8-23m<sup>2</sup> heating capacity
- Aluminium body with sleek black and silver finish
- IP3X rating
- 25 second warm up time
- 9000 hour bulb life



## TECHNICAL SPECIFICATIONS

Product Code	Watts	Hertz	Volts	Heat Capacity (m <sup>2</sup> )	Length (mm)	Height (mm)	Depth (mm)	Weight (kg)
UFO S/2300	2300	50-60	230	Indoor - 23	910	190	90	3.0

Control:

The heaters are supplied with a remote control that provides 5 levels of comfort heat:

- 1.0.3 kW/s
- 2.1.6 kW/s
- 3.1.9 kW/s
- 4.2.1 kW/s
- 5.2.3 kW/s

## DESIGN & INSTALLATION

If wall mounting, it must be at least 1.80m (5'10") from the floor. Avoid mounting by a window to minimise heat loss.

Mounting the heater tilting downwards and aimed at the desired area will reduce heat loss to the ceiling.

Not suitable for outdoor use, take a look at our UFO S-29 Infrared Heater which can be used in outdoor spaces.

To wall mount:

- Arrange the screws on the back of the UFO infrared heater to have at least 7.9 inches (20 cm) of space between each screw.
- Screw the brackets to the product.
- Drill holes on the wall for the brackets.
- Screw the brackets on the wall, leaving the middle hole free.
- Attach the heater from the brackets by using the bolts.
- Tighten the bolts and you can safely use your product

For more detailed operating and installation instructions, please get in touch.





Burnfoot Industrial Estate  
Roxburghshire  
Scotland, TD9 8SL

[www.turnbull-scott.co.uk](http://www.turnbull-scott.co.uk)  
+44 (0)1450 372 053